

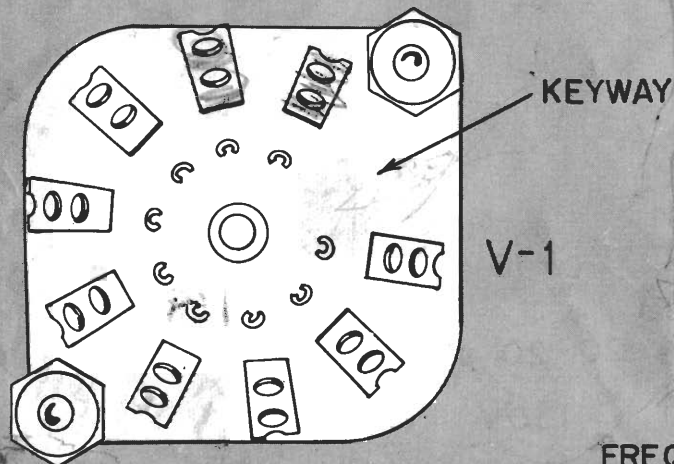


SCRAPE PAINT AWAY FROM
CENTER HOLE BEFORE
MOUNTING J-2

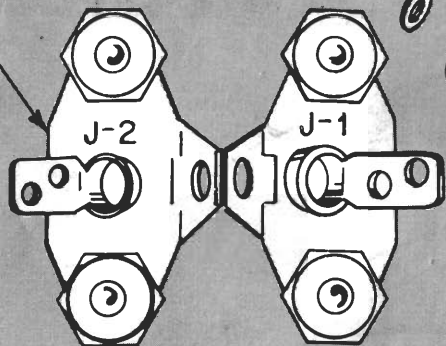

V-1


KEYWAY

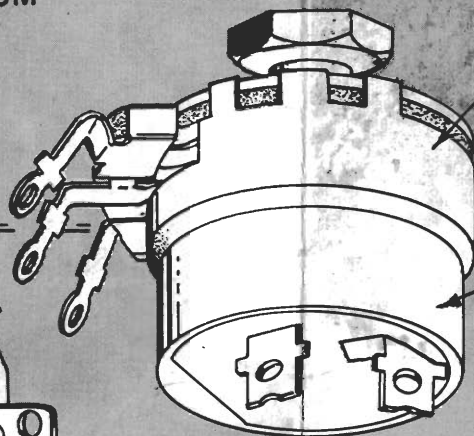

R-9 500K
VOLUME CONTROL

S-1
ON-OFF SWITCH

7-PIN TUBE SOCKET

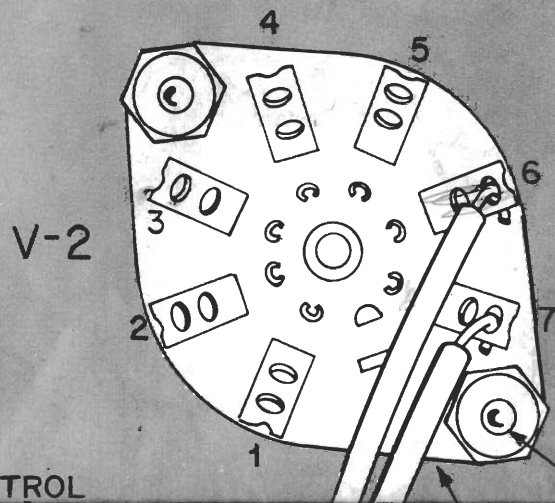

V-2



FREQUENCY CONTROL

9-PIN TUBE SOCKET

CAPACITOR

C-9 30-220 μ fd

KEYWAY

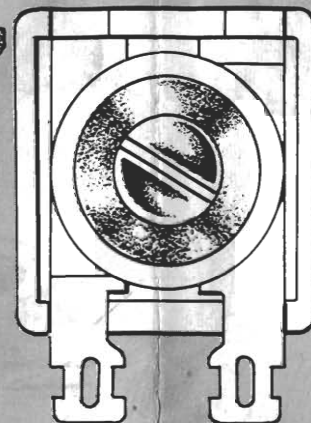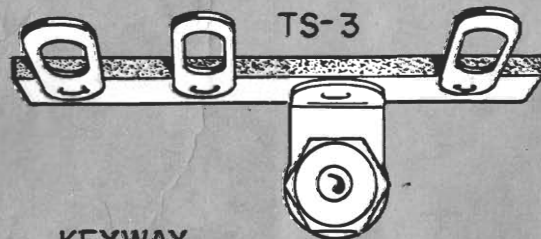

BLUE


RED

SCREWS FROM T-1 TRANSFORMER BRACKET

GROMMET

TS-4

KEYWAY

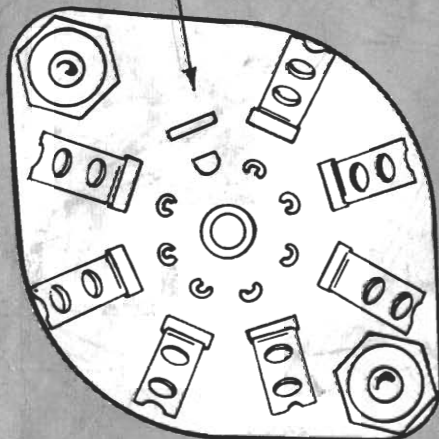

7-PIN TUBE SOCKET

SR-1
SELENIUM
RECTIFIER

V-3

TS-2

TS-1

GROMMET

REAR OF CHASSIS

CHASSIS AND TS-1 & TS-2 SHOWN BENT FOR CLARITY
DO NOT BEND CHASSIS OR PARTS.

FIGURE 4. MOUNTING THE PARTS

knight-kit®

RADIO BROADCASTER-AMPLIFIER



1
M/cg

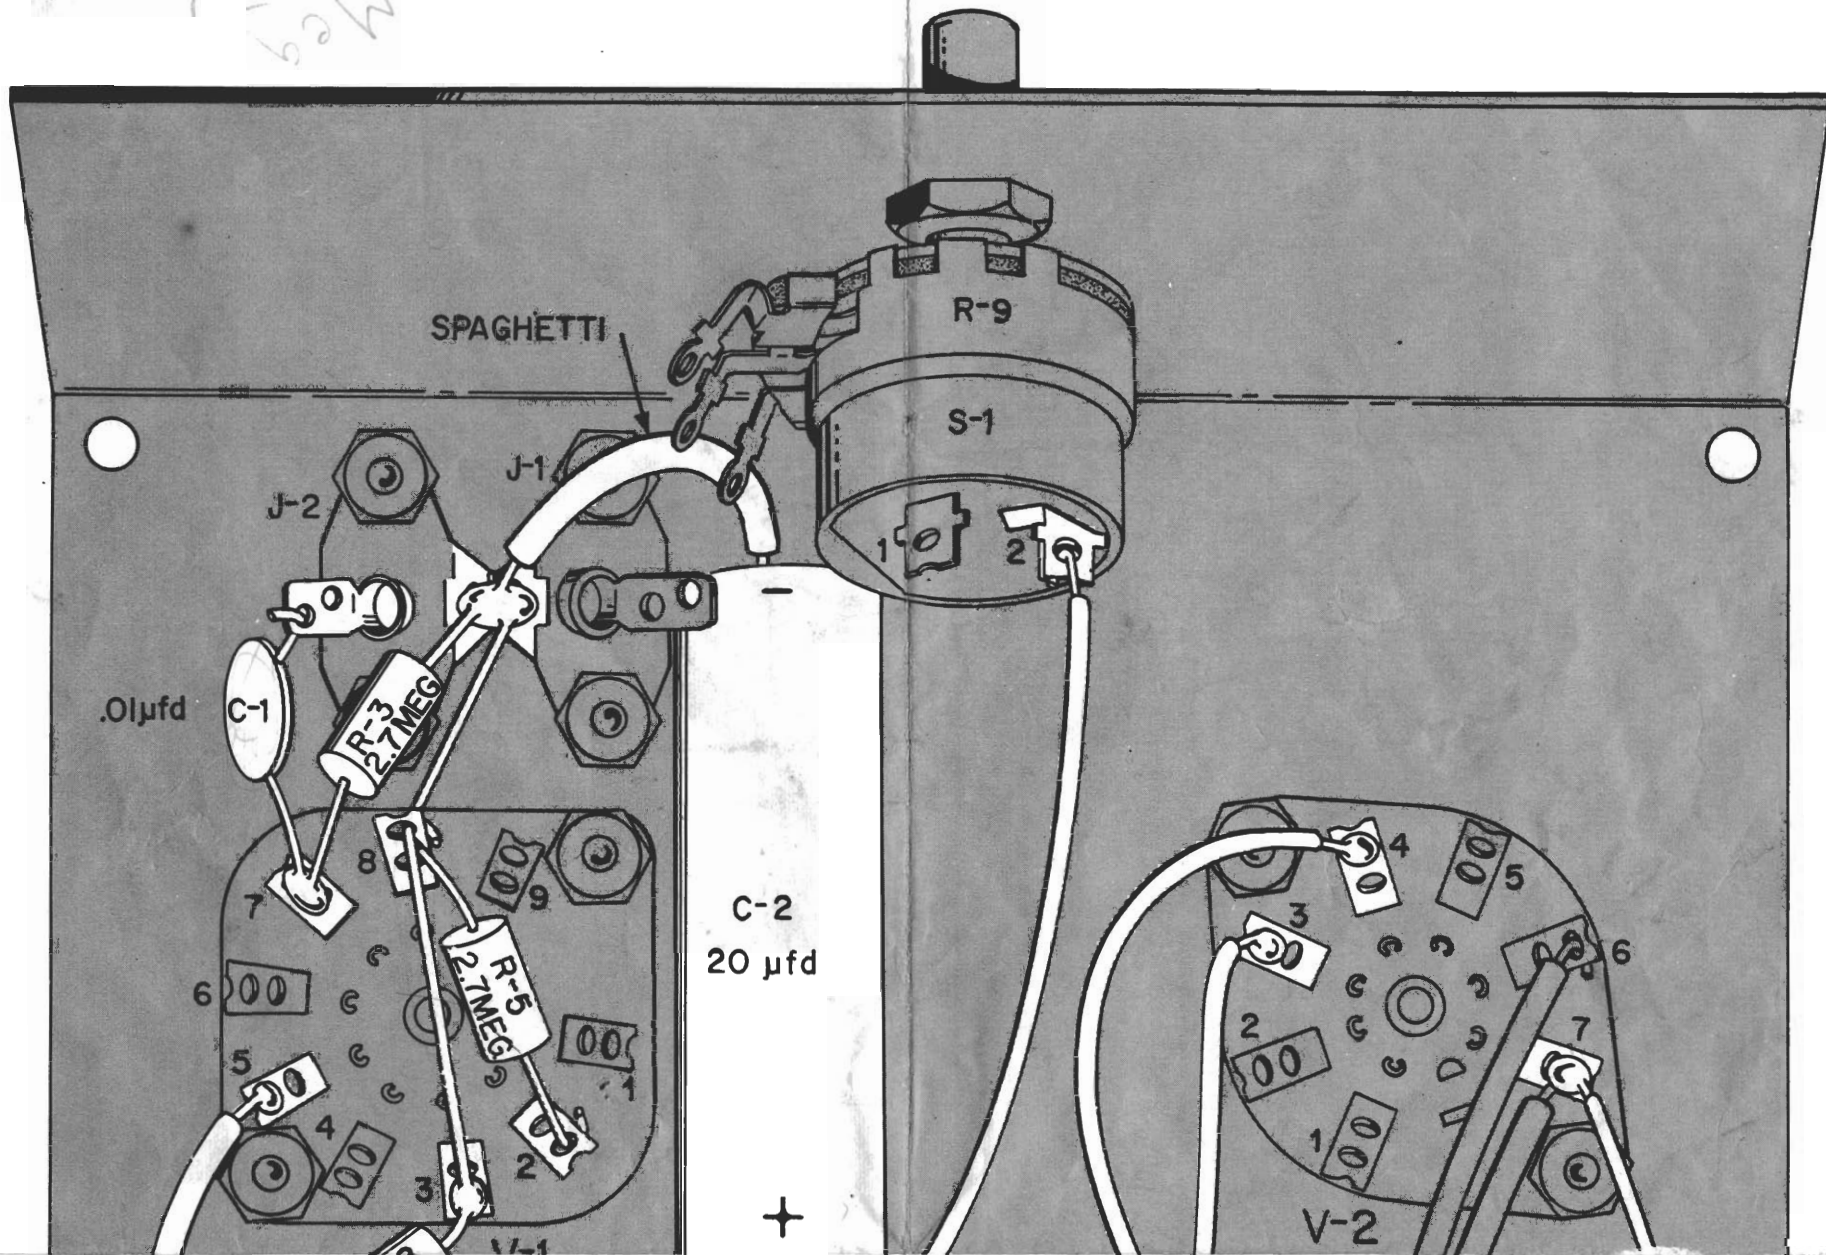
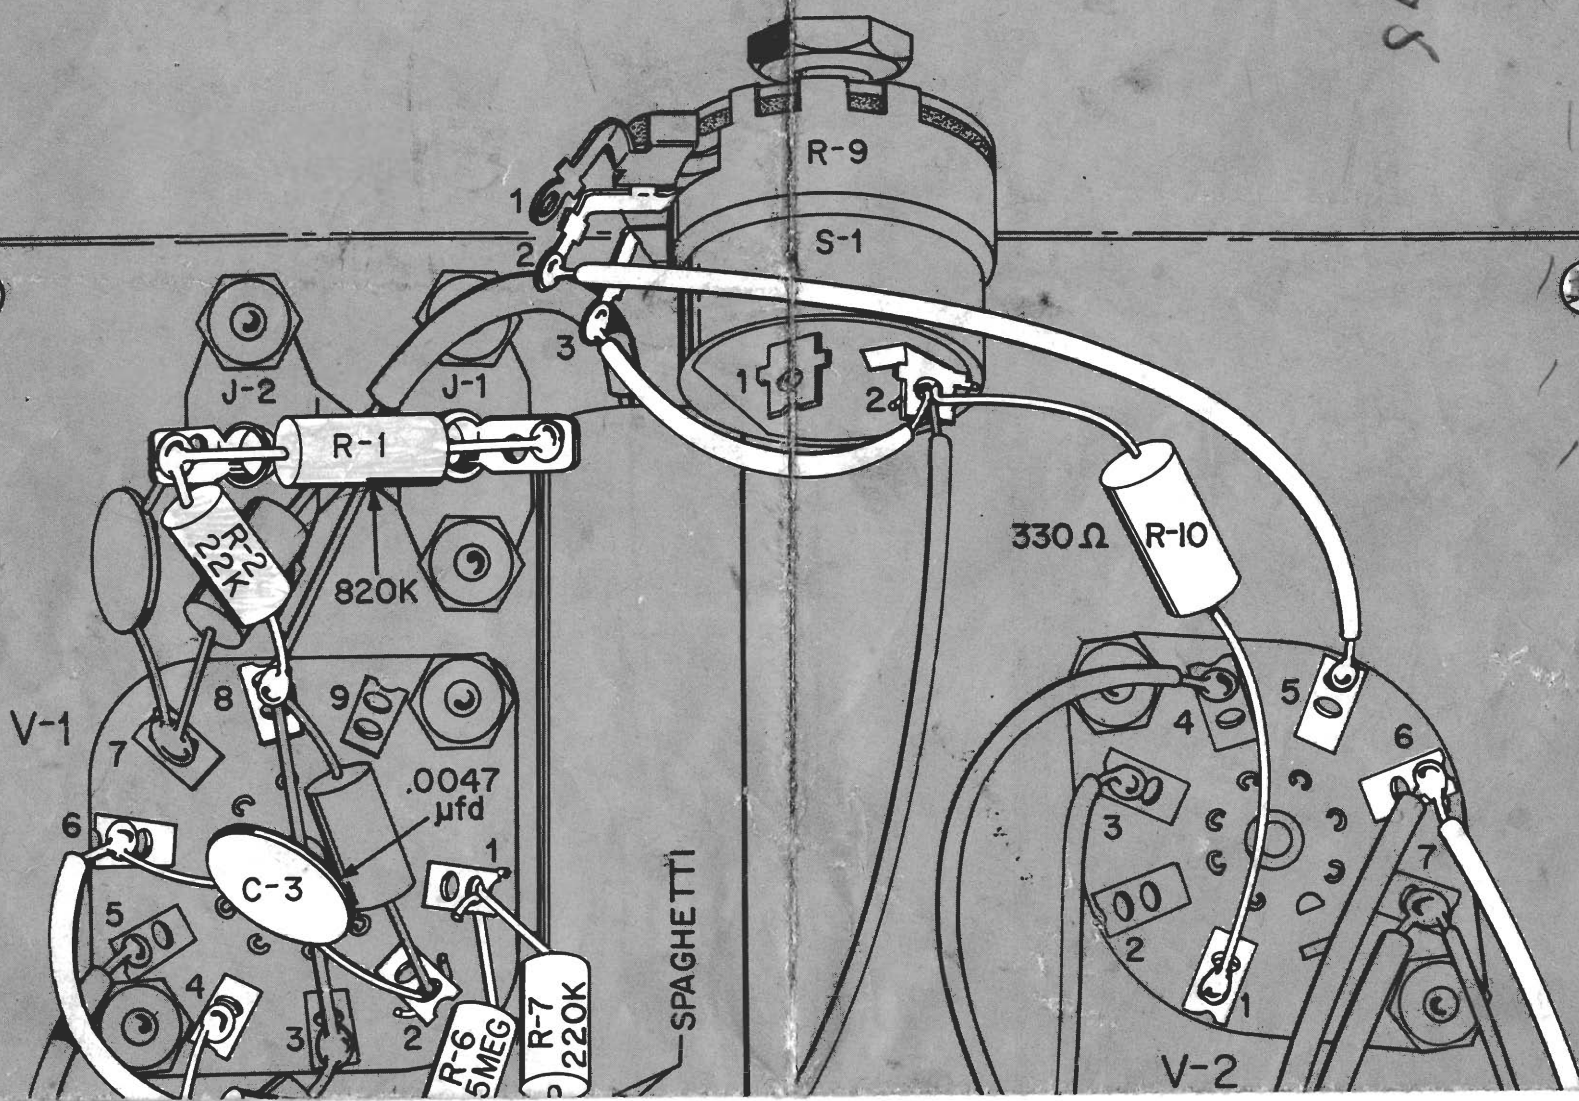




FIGURE 5. FIRST WIRING VIEW

9851



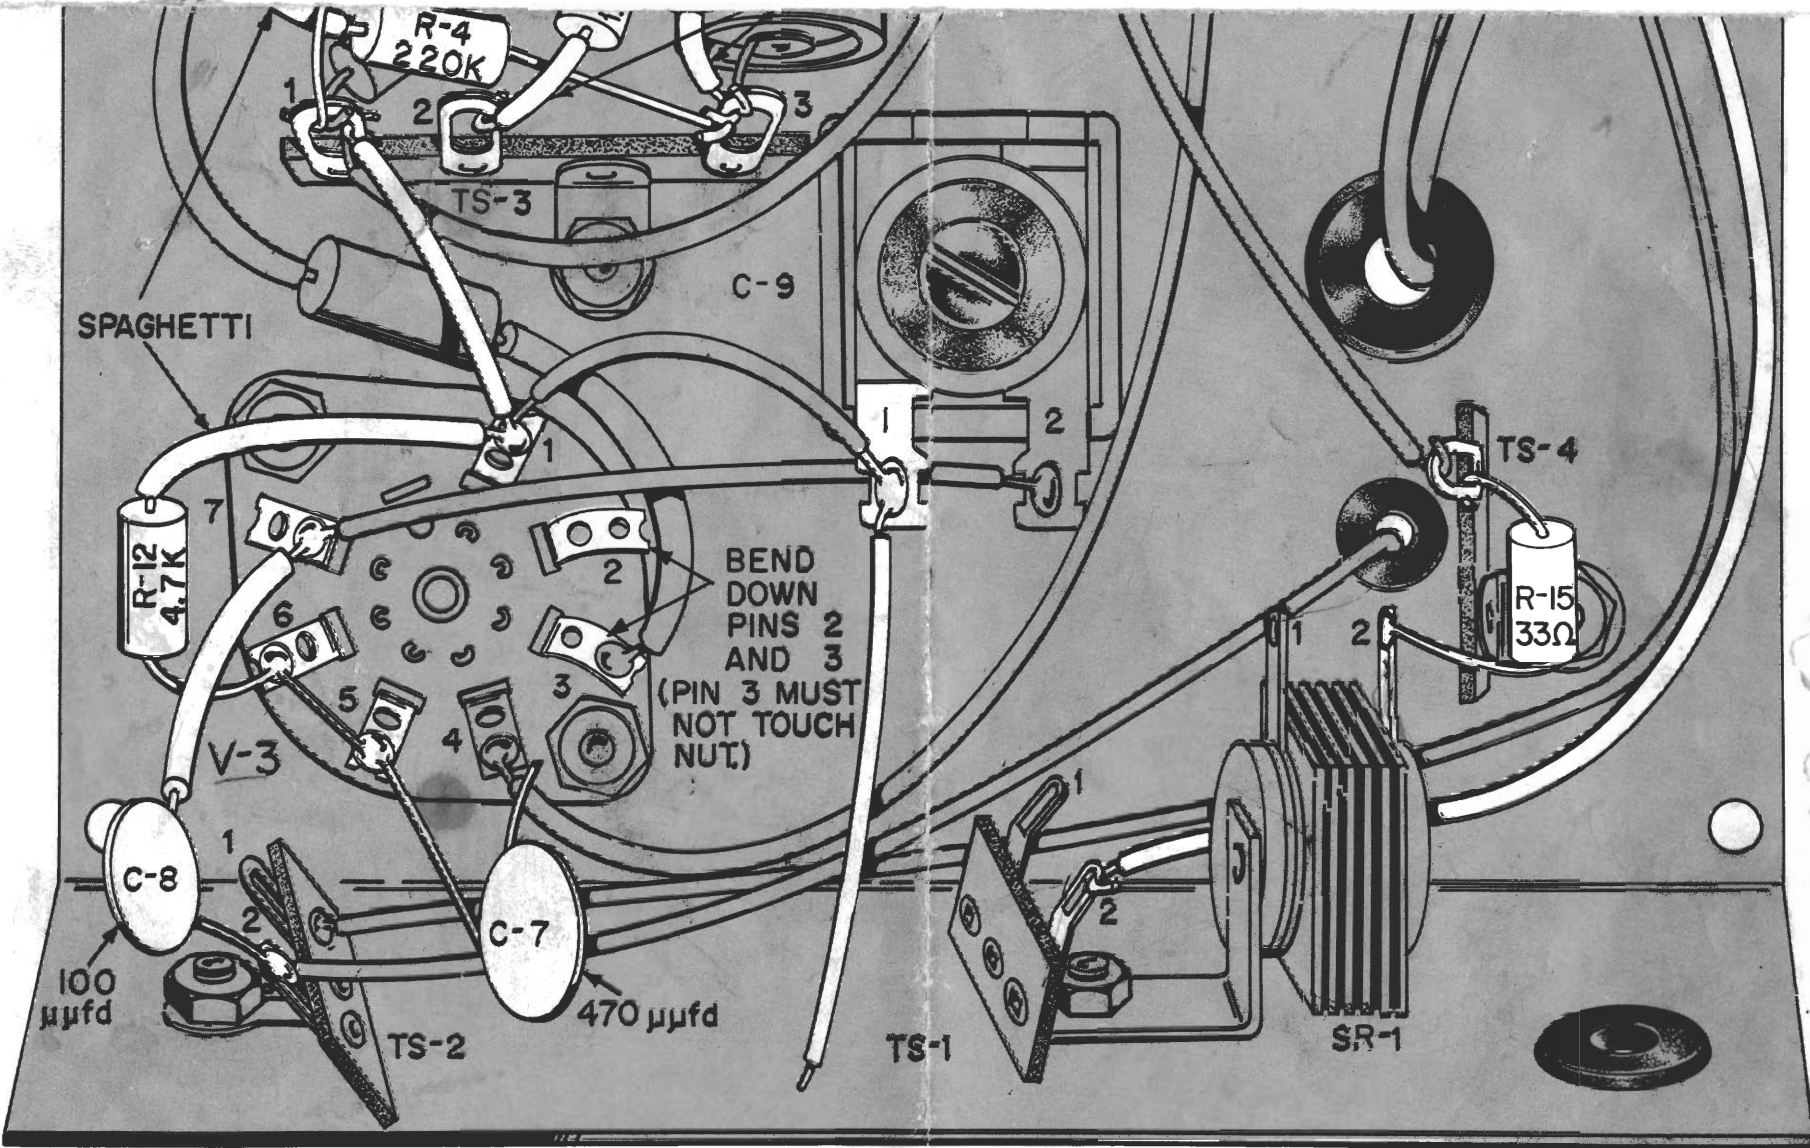
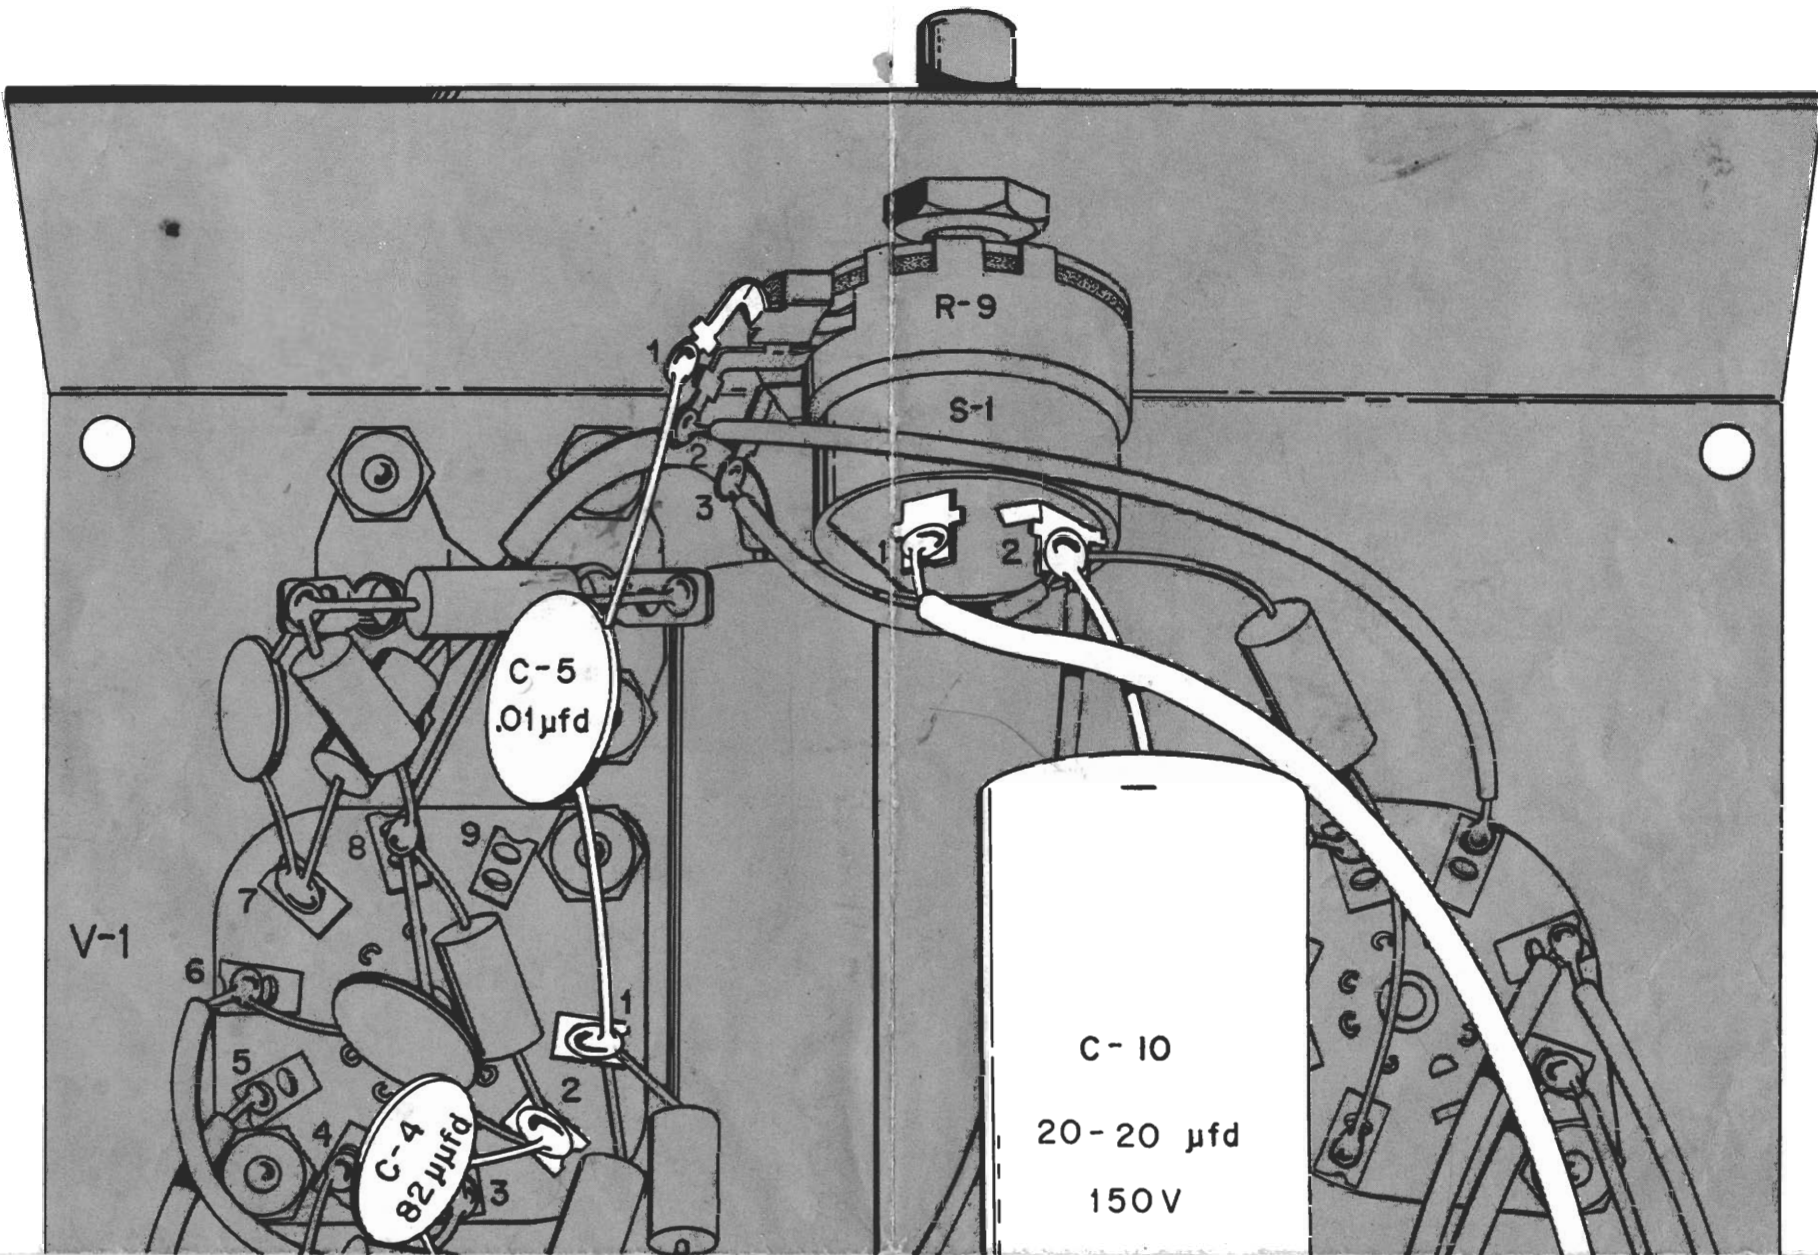


FIGURE 6. SECOND WIRING VIEW

Torcom



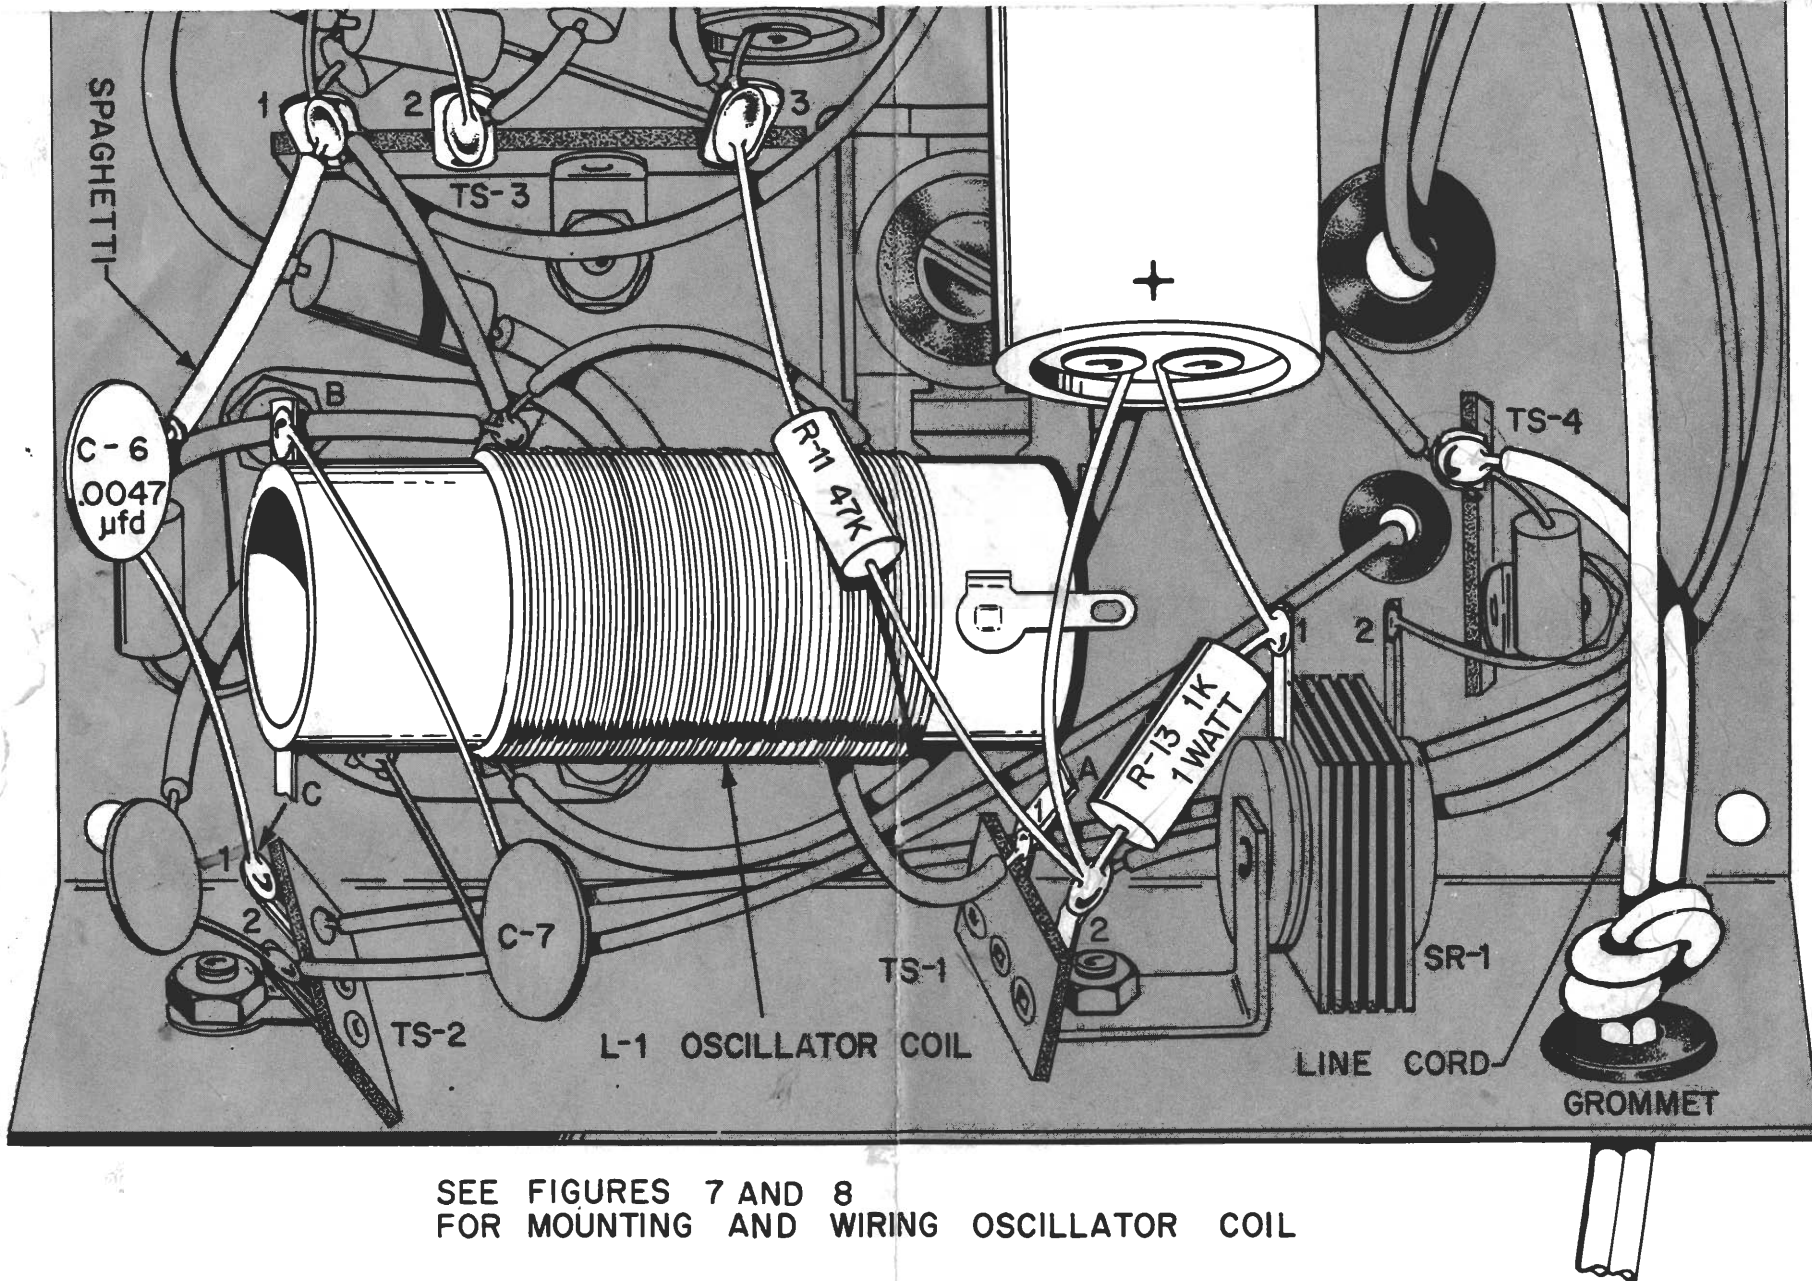


FIGURE 9. THIRD WIRING VIEW